

**Brought to you by Pro Gear &  
Transmission.**

**For parts or service call:**


**877-776-4600  
407-872-1901**



**[www.globaldifferentialsupply.com](http://www.globaldifferentialsupply.com)**



**906 W. Gore St. Orlando, FL 32805  
[parts@eprogear.com](mailto:parts@eprogear.com)**

## Relays in top TEC panel: #R1–R13

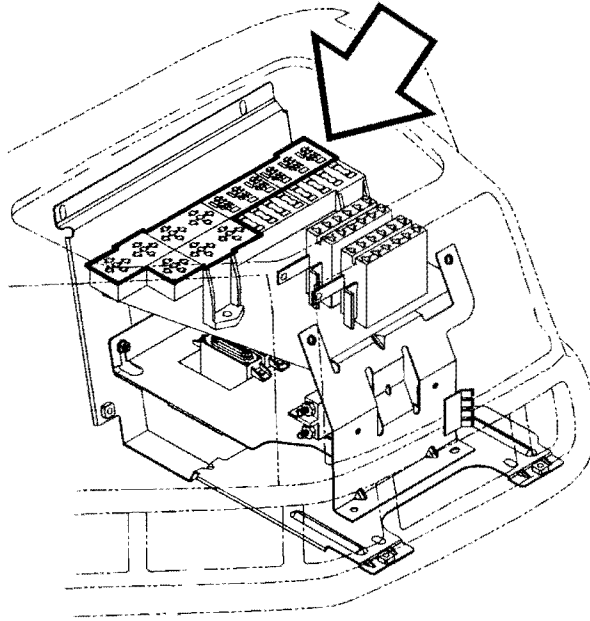

W3000964


## Maxi-fuses:

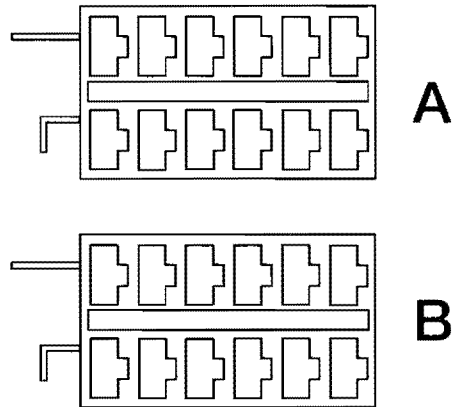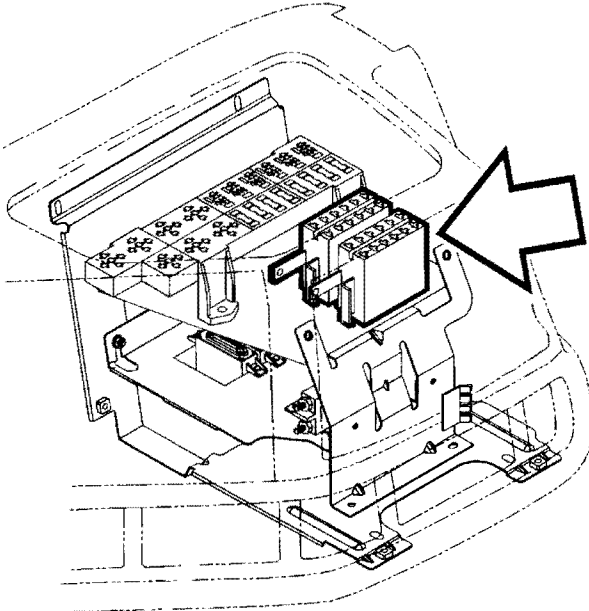

- A Battery Maxi-fuses
- B Ignition Maxi-fuses


W3000968

## Fuses in front TEC panel: #1–40

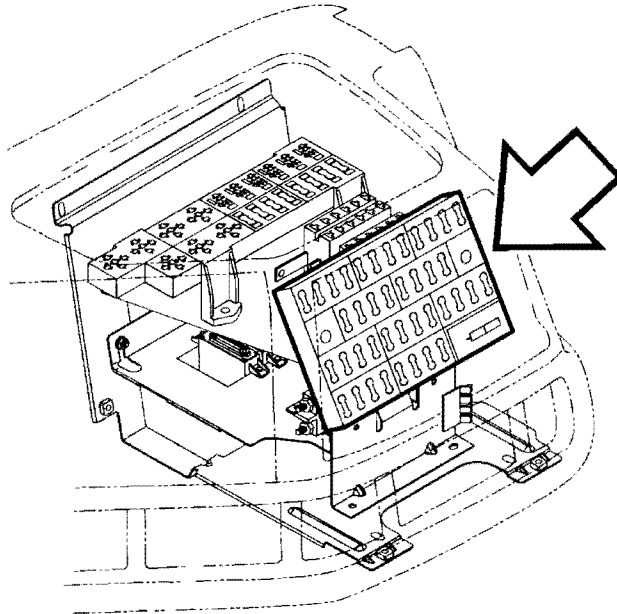

W3000965


## Fuses in top panel: #41–48

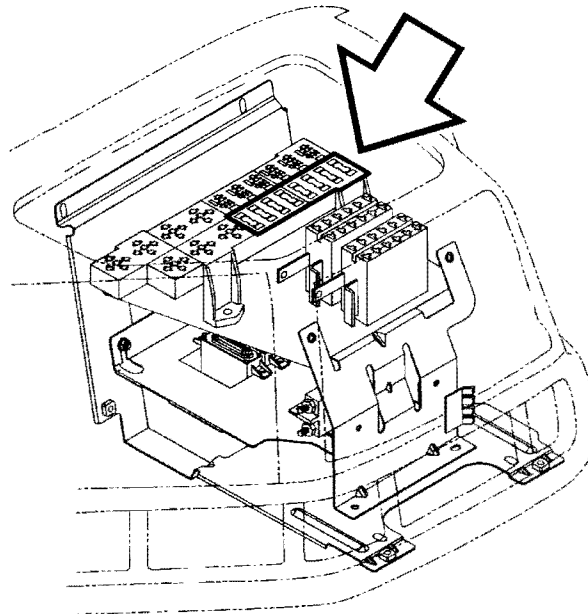

W3000966

**Note:** Refer to the decal inside the TEC cover for vehicle's exact fuse descriptions and ratings.

## In-line fuses at top of battery box

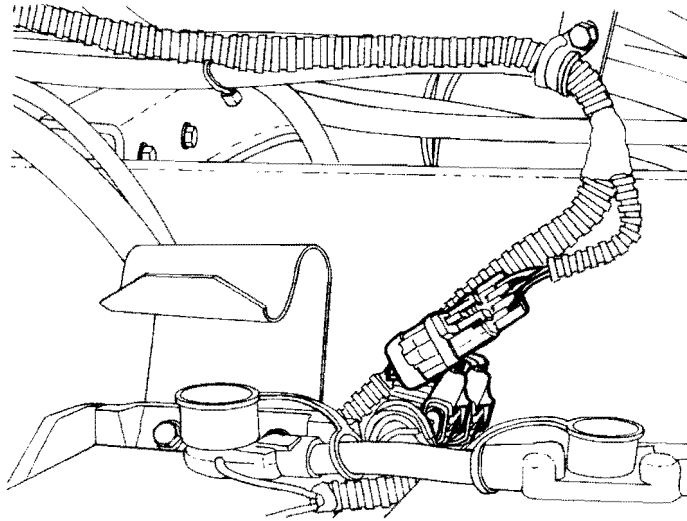

W3000885

One or two in-line fuses may be used, depending on engine type. For more information on the number of fuses and rating, refer to the VNL, VNM electrical schematic service manuals.